

PROTOCOL

Protein Extraction

Application

This protocol explains how to perform protein extraction with P3D Scaffolds. For more protocols, please visit our [Resources Platform](#).

Materials

- PBS
- Lysis buffer
- Centrifuge
- Ice

Flowchart

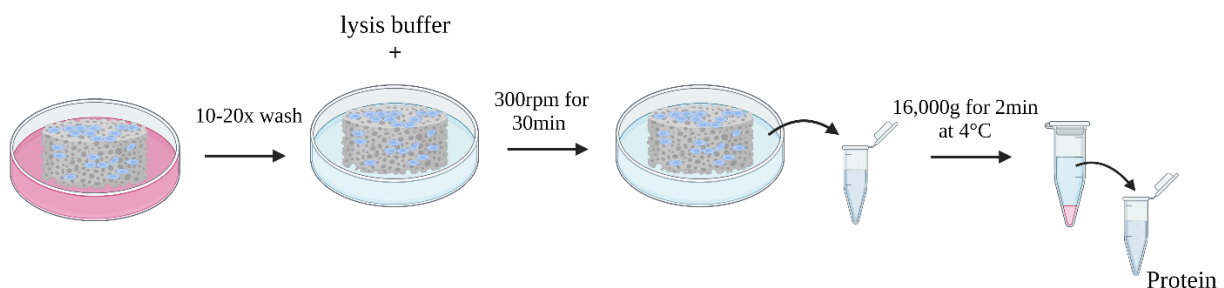


FIGURE 1: WORKFLOW FOR HARVESTING PROTEIN FROM CELLS CULTURED ON P3D SCAFFOLDS.

Notes before starting and general advice on material handling

- All handling of The P3D Scaffolds products should be performed using gloves, according to the standard aseptic methods.
- The scaffolds are supplied sterile by dry heat sterilization and remains sterile until opened.

Procedure

- Aspirate cell medium.
- Wash 10-20x in prewarmed PBS for 1 minute each wash. When washing alternate between dripping on the top of the scaffold and beside the scaffold. It is important to remove all traces of medium.
- Cover scaffolds in lysis buffer.
- Shake scaffolds at 300 rpms for 30 min.
- Flush scaffolds and collect lysate in Eppendorf tubes.
- Centrifuge samples at 16,000 g for 20 min at 4C.
- Place samples on ice and pipette supernatant with proteins in to clean prelabelled Eppendorf tubes
- Samples can now be stored at -80C and continue to downstream protein applications

Disclaimer:

The products are “For Research Use Only (RUO)” and should not be used for clinical purposes. Ossiform makes no other warranties, expressed or implied, including the implied warranty of merchantability and the implied warranty of fitness for particular purpose.

Patent status:

The product is protected by one or more US, European, and/or foreign patents.

Safety Data Sheet:

Download from our website [here](#).

Technical Data Sheet:

Download from our website [here](#).